

Roll-A-Matic Mini Instructions

Mini COMPONENTS

Aluminum base



2-section support poles



Fig. 1

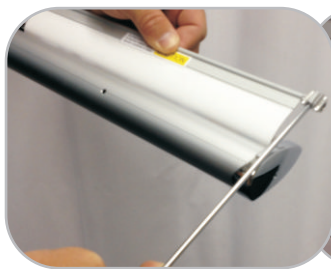


Fig. 2



Fig. 3



1. Remove unit from its storage box.

2. Insert both of the support poles sections together to form your back pole (see fig. 1)

3. Hold up banner from base and from one end slide support pole top on and slide over to the middle of the banner top rail (see fig. 2)

4. Holding support pole in the middle and base steady carefully pull up banner until the bottom of the pole can be easily inserted into the base hole (see fig. 3) ** Make sure pole is fully inserted into base.

5. Place on table in desired area.

To Dismantle reverse instructions.

NOTE: DO NOT KINK OR USE ROUGH TREATMENT.

Banner damage from general long term use, abuse, misuse, letting go of banner or consistent damage with not paying attention when rolling up and down banner is NOT covered under the warranty.



Back side of unit when set up

